




IC-M100 OPERATING GUIDE



SELECTING A CHANNEL (P11)

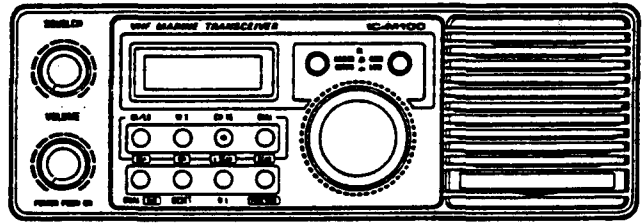

1) Push [DIAL] SWITCH.



2) Select either USA or INTERNATIONAL.



3) Rotate the CHANNEL SELECTOR.


TAILER FUNCTION (P21)



1) Push [HL] SWITCH.



2) Push [HL/INCOM] SWITCH OUT and select [HIGH/LOW] SWITCH.

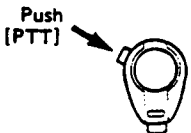

3) Push [PTT] SWITCH and speak into the mic.



4) Push [HL] SWITCH again to cancel the function.

INTERCOM FUNCTION (P22)



1) Push [HL] SWITCH.



2) Push [HL/INCOM] SWITCH IN.



3) Push [PTT] SWITCH and speak into the mic.



4) Release [PTT] SWITCH.

WEATHER CHANNEL (P12, 16)

• Selecting a weather channel




1) Push [WX] SWITCH.



2) Rotate the CHANNEL SELECTOR.

• Weather channel scan



1) Rotate [SQUELCH] CONTROL CW to close squelch.



2) Push [FUNCTION] SWITCH and then push [SCAN] SWITCH.



3) Push [WX] SWITCH to stop scanning.


DUAL WATCH (P19)




1) Push [DIAL] SWITCH.



2) Rotate the CHANNEL SELECTOR and set the desired channel.




3) Push [DUAL] SWITCH.



4) Push [DIAL] SWITCH to cancel the function.

* Detailed instructions for each function are indicated by bracketed page numbers.

CHANNEL SCANNING (P16)



1) Rotate [SQUELCH] CONTROL CW to close squelch.



2) Push [DIAL] SWITCH.



3) Push [FUNCTION] SWITCH and then push [SCAN] SWITCH.



4) Push [DIAL] SWITCH again to stop scanning.

MEMORY READ (P15)



1) Push [FUNCTION] SWITCH and then push [MR] SWITCH.



2) Rotate the CHANNEL SELECTOR and set the desired channel.


MEMORY SCAN (P15)




1) Push [FUNCTION] SWITCH and then push [MR] SWITCH.



2) Rotate [SQUELCH] CONTROL CW to close squelch.



3) Push [FUNCTION] SWITCH and then, push [SCAN] SWITCH.



4) Push [FUNCTION] SWITCH to stop scanning.

MEMORY WRITE (P15)



1) Push [FUNCTION] SWITCH and then hold down [MR] SWITCH unit "MEMO" blinks.



2) Rotate the CHANNEL SELECTOR and set the desired memory channel and then push [FUNCTION] SWITCH.



3) Rotate the CHANNEL SELECTOR and set the desired channel.



4) Push [FUNCTION] SWITCH.

LOCKOUT SCAN (P17)

•Preset for lockout scan



1) Push [DIAL] SWITCH.




2) Rotate the CHANNEL SELECTOR and select the lockout channel.



3) Hold down the [FUNCTION] SWITCH, and then push the [L-SCAN] SWITCH.


•Scanning



1) Rotate [SQUELCH] CONTROL CW to close squelch.



2) Push [FUNCTION] SWITCH and then push [L-SCAN] SWITCH.



3) Push [DIAL] SWITCH.

DISPLAY LIGHT (P20)

•Light ON and OFF



1) Push [FUNCTION] SWITCH and then push [DIM] SWITCH.



2) Repeat step-1) to change the condition of the light.

•Light intensity



1) Hold down [FUNCTION] SWITCH and then push [DIM] SWITCH.



2) Release [DIM] SWITCH but hold down [FUNCTION] SWITCH.




3) Rotate the CHANNEL SELECTOR.




4) Release [FUNCTION] SWITCH.

* Detailed instructions for each function are indicated by bracketed page numbers.

IC-M100 VHF MARINE TRANSCIVER

 ICOM

OWNERS MANUAL

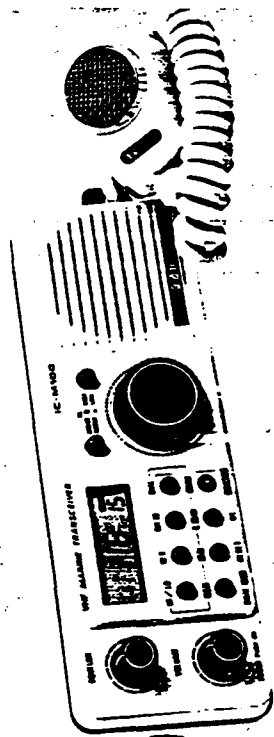

PRODUCED AT GOVERNMENT EXPENSE


FOREWORD

Thank you for choosing the **IC-M100**, one of the finest VHF FM Marine Transceivers on the market today. It was designed and built by **ICOM INCORPORATED**, a long-time leader in the field of VHF communication. This transceiver incorporates state-of-the-art technology, and it was built specifically for Marine applications using experience gained over a long period of time.

Please read this owner's manual carefully before using your **IC-M100** transceiver. With proper care, the **IC-M100** will provide many years of dependable and enjoyable communication.

UNPACKING

Accessories included with the IC-M100:	QTY.
1. Mounting Bracket	1
2. DC Power Cable with Microphone Hanger Box	1
3. 8-pin ACC Connector Plug	1
4. Mounting Self-tapping Screws	4
5. Mounting Bolts	4
6. Mounting Nuts	4
7. Flat Washers	8
8. Spring Washers	4
9. Self-tapping Screws for Microphone Hanger	2
10. Mounting Bracket Key	2
11. Fuses (10A)	2

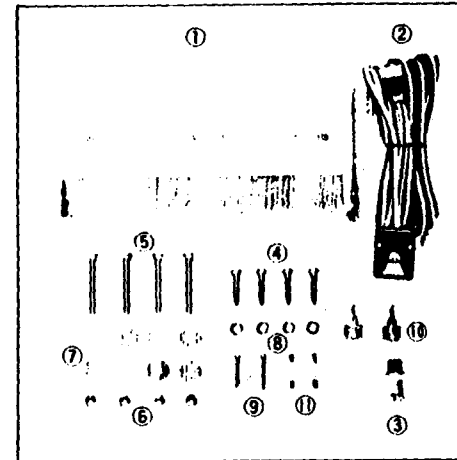

VALIANT

SECTION	1	FEATURES	1
SECTION	2	INSTALLATION	2
	2-1	MOUNTING LOCATION	2
	2-2	MOUNTING THE TRANSCEIVER	3
	2-3	ANTENNA	4
SECTION	3	CONTROL FUNCTIONS.....	5
	3-1	FRONT PANEL.....	5
	3-2	CHANNEL AND FUNCTION DISPLAY	9
	3-3	REAR PANEL.....	10
SECTION	4	BASIC OPERATION	11
	4-1	RECEIVING	11
	4-2	TRANSMITTING	13
SECTION	5	FUNCTIONS OPERATION.....	15
	5-1	MEMORY CHANNEL OPERATION.....	15
	5-2	SCANNING OPERATION.....	16
	5-3	DUAL WATCH OPERATION	19
	5-4	DISPLAY LIGHT AND LIGHT DIMMER	20
	5-5	HAILER AND INTERCOM OPERATIONS.....	21
SECTION	6	OPERATING RULES AND GUIDELINES	24
SECTION	7	MARINE VHF TRANSCEIVER CHANNEL CHART.....	27
SECTION	8	SAMPLE LOGS	29
SECTION	9	TROUBLESHOOTING.....	30
SECTION	10	SPECIFICATIONS	31
SECTION	11	EMERGENCIES	32


OPTIONAL FEATURES

- All marine and weather channels pre-programmed.
- Weatherproof and dust-tight case, molded frame.
- 16 user-programmable memory channels with a backup lithium battery.
- 4 different channel scanning systems.
- HAILER and INTERCOM operations available.
- Dual watch mode for monitoring channel 16 while listening on a different channel.
- Auto-monitor for channel 16.
- Advanced RF front end circuit with helical resonators, MOSFETs and both crystal and ceramic filters for improved adjacent channel and intermodulation rejection.
- High power, distortion-free audio output.
- Mounting bracket with adjustable viewing angle.
- Optional DTMF microphone available.
- Newly designed display that uses a soft orange illumination for easy visibility when operating on bright days.
- Two different colors white and gray available.

2-1 MOUNTING LOCATION

Avoid long cable runs to the antenna, power source, and HAILER/INTERCOM cables. Keep these cables as far away as possible from electrical pumps, generators and other electronic instruments.



Keep the HAILER/INTERCOM cable and ANTENNA cable as far away from each other as possible.

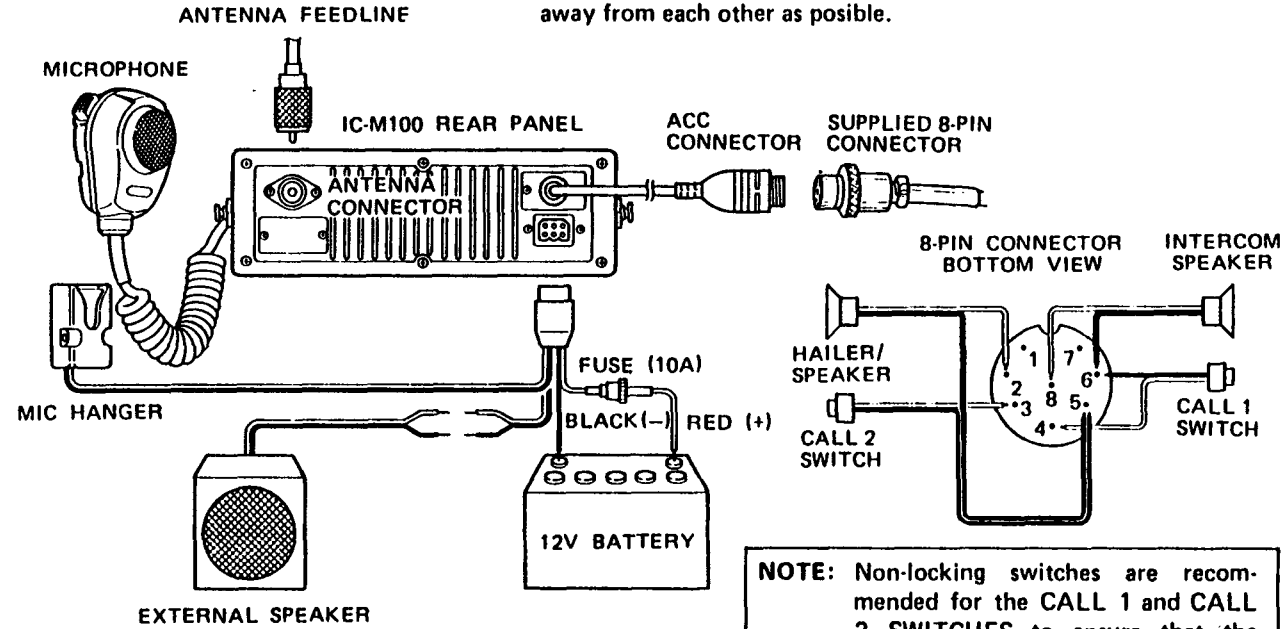


NOTE: Non-locking switches are recommended for the CALL 1 and CALL 2 SWITCHES to ensure that the transceiver's functions remain operational.

2-2 MOUNTING THE TRANSCEIVER The universal bracket supplied with your transceiver allows "over" or "under" mounting. Install the bracket so the unit is adequately supported, thus protecting it from wave shock and excessive vibration.

The mounting hardware supplied is suitable for most installations, but if you need special hardware, any good marine store should be able to assist. As in any marine installation, it is recommended that only high quality marine hardware be used. Try to avoid drilling new mounting holes in the bracket as balance of the transceiver may be affected.

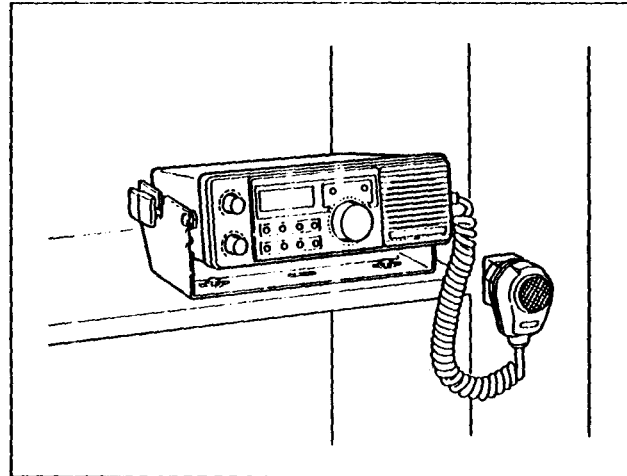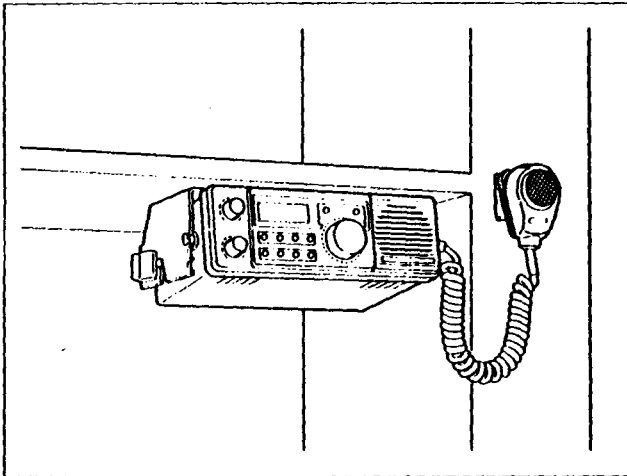

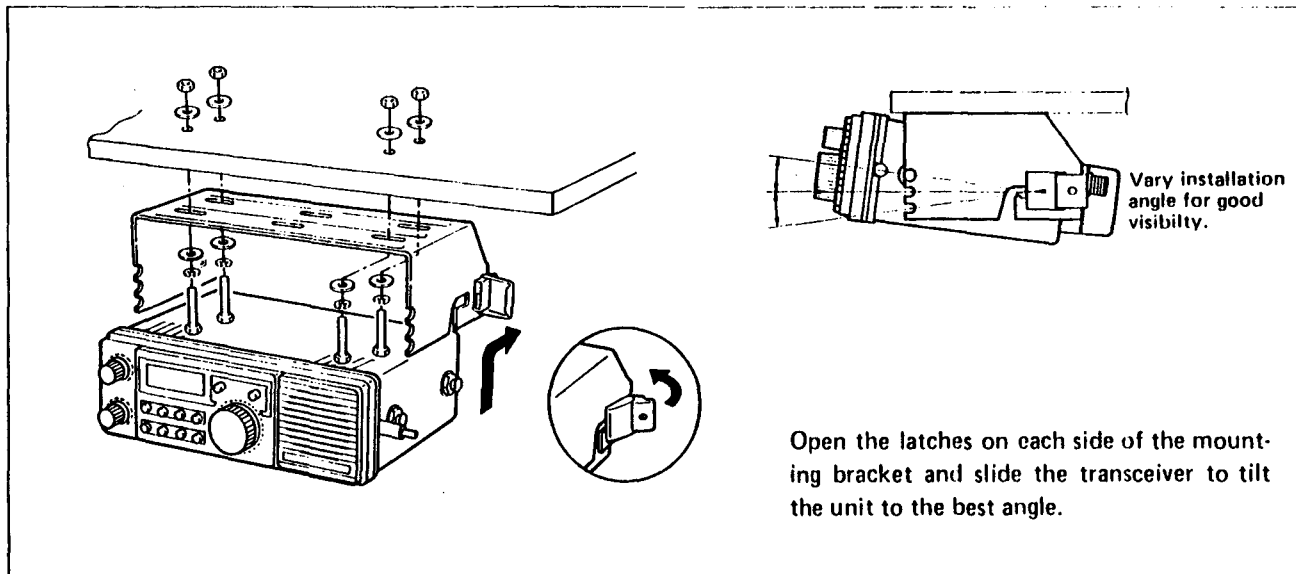

2-3 ANTENNA


The antenna is the most important item that influences the performance of your transceiver. Any good quality, 50Ω marine antenna will suffice, but a high gain antenna is preferable.

The mounting location is also important, therefore consult your dealer if you are uncertain where to install the antenna. Follow the antenna manufacturer's instructions exactly.

If using a previously installed antenna system, check that all connections are corrosion-free and secure.

FUNCTIONS

3-1 FRONT PANEL

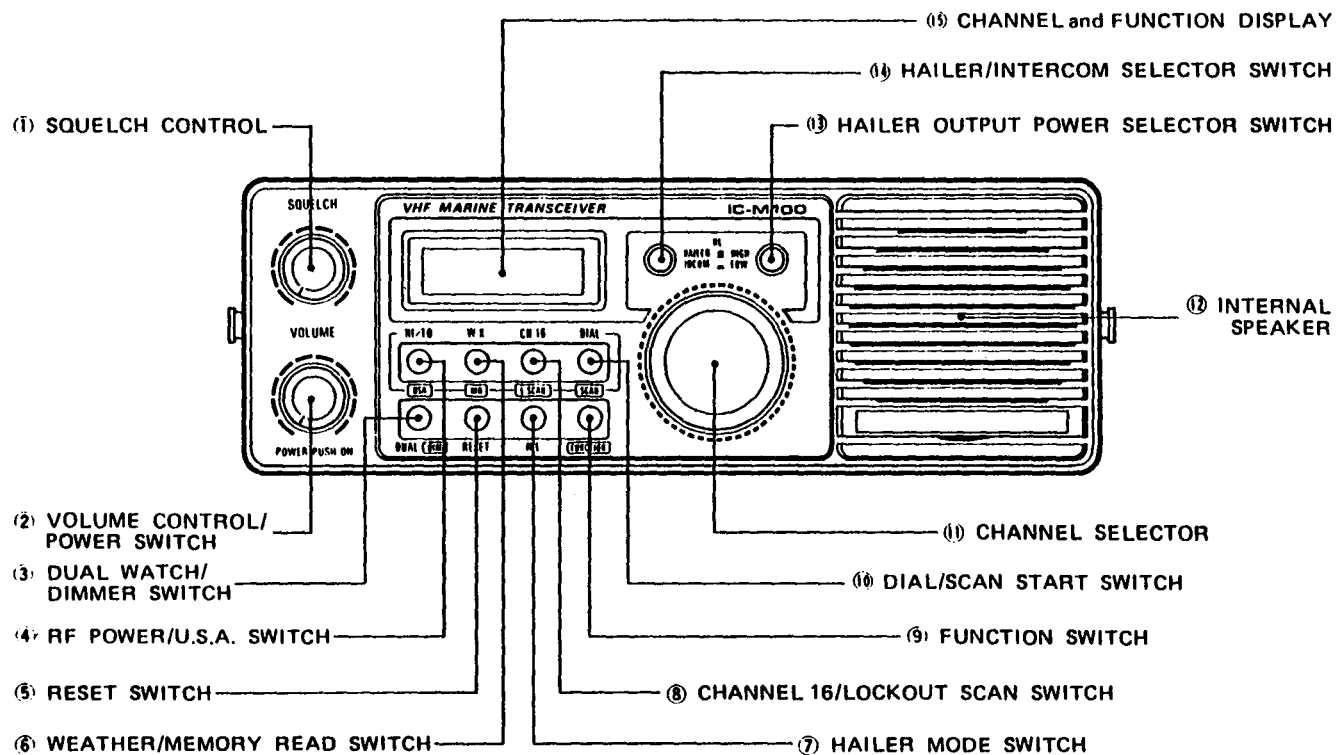

① SQUELCH CONTROL [SQUELCH]

Varies the squelch threshold level for quiet monitoring when no receive signal is present. Rotate completely counterclockwise to turn OFF the squelch function, and clockwise to increase the threshold level.

② VOLUME CONTROL/POWER SWITCH [VOLUME/POWER]

Varies the audio output level from the speaker in the receive mode, including the level of the switch BEEP tones as each panel switch is operated. Rotate clockwise to increase the sound level.

This is also a power switch for turning the transceiver ON and OFF.

③ DUAL WATCH/DIMMER SWITCH [DUAL/DIM]

Activates the dual watch function. This function permits monitoring of channel 16 while listening on a different channel. Refer to SECTION 5 - 3 for the operating procedure.

This switch also controls the illumination of the CHANNEL DISPLAY. Refer to SECTION 5 - 4 for more information.

④ RF POWER/USA SWITCH [HI/LO/USA]

Alternately changes the transmit output power between the HIGH (25W) and the LOW (1W) positions. HIGH power is useful for long distance communications whereas LOW power is best for contacting stations nearby.

This switch also selects the International and U.S.A. channel systems alternately.

⑤ RESET SWITCH [RESET]

This switch is used for erasing contents of ALL memory channels or resetting the transceiver when erroneous information is displayed on the CHANNEL DISPLAY. Refer to SECTION 9 for more information.

(6) WEATHER/MEMORY READ SWITCH
[WX/MR]

Selects the weather channel mode. Rotate the CHANNEL SELECTOR to choose the desired weather channel. Refer to SECTION 4 - 1 for operating the weather channels.

This switch also selects the memory channel mode. Refer to SECTION 5 - 1 for operating the memory channel.

(7) HAILER MODE SWITCH [HL]

Alternately changes modes between the hailer mode and normal operating mode. When in the hailer mode, "HL" appears on the CHANNEL DISPLAY. Refer to SECTION 5 - 5 for operating instructions.

(8) CHANNEL 16/LOCKOUT SCAN
SWITCH [CH16/L-SCAN]

Selects the channel 16 auto-monitor mode. This function overrides all other switch functions. Each time the microphone is replaced in the microphone hanger, the transceiver switches to the channel 16 auto-monitor mode.

This switch also starts and stops the lockout scanning function. Refer to SECTION 5 - 2 for the operating procedure.

(9) FUNCTION SWITCH [FUNCTION]

Activates the secondary function of each dual function switch on the front panel. Push this switch first, and then push the [SCAN], [MR], [USA], [DIM] or [L-SCAN] SWITCHES to activate their respective functions. After pushing the [FUNCTION] SWITCH, you have 3 seconds to push dual function switches before they return to their primary functions.

**10. DIAL/SCAN START SWITCH
[DIAL/SCAN]**

Selects the dial mode. Rotate the CHANNEL SELECTOR to choose an operating channel. Refer to SECTION 4 - 1 for more information.

This switch also starts and stops the scanning functions. Refer to SECTION 5 - 2 for the operating procedure.

(1) CHANNEL SELECTOR

Selects a programmed channel, memory channel or weather channel. Rotate clockwise or counterclockwise to change the operating channel in any mode.

(2) INTERNAL SPEAKER

This speaker operates when the transceiver is receiving or the intercom is operating.

**(3) HAILER OUTPUT POWER SELECTOR
SWITCH [HIGH/LOW]**

Selects the hailer output power when in the hailer mode. Refer to SECTION 5 - 5 for operating information.

**(4) HAILER/INTERCOM SELECTOR
SWITCH [HAILER/INCOM]**

Selects either hailer or intercom mode. Refer to SECTION 5 - 5 for operating instructions.

**(5) CHANNEL AND FUNCTION
DISPLAY**


Shows current operating channel and additional information. Refer to SECTION 3 - 2.

3-2 CHANNEL AND FUNCTION DISPLAY



- | | |
|--------------------------------|---|
| (16) TRANSMIT INDICATOR | "TX" appears when the transceiver is transmitting. |
| (17) SCAN INDICATOR | "SCAN" appears when the transceiver is operating in channel, weather, or memory scan. "L-SCAN" appears during lockout scan. |
| (18) CHANNEL SYSTEM INDICATOR | "USA" appears when the USA channel system is selected. |
| (19) WEATHER CHANNEL INDICATOR | "WX" appears when a weather channel is selected. |
| (20) MEMORY CHANNEL INDICATOR | "MEMO" and the selected memory channel number appear when in the memory mode. |
| (21) SIMPLEX INDICATOR | "A" appears when operating in the simplex mode on a duplex channel. |
| (22) CHANNEL NUMBER INDICATOR | Indicates the operating channel number. |
| (23) TRANSMIT POWER INDICATOR | "LOW" appears when the transceiver uses LOW power or operates on pre-set LOW power channels. |
| (24) DUAL WATCH INDICATOR | "DUAL" appears when the dual watch function is operating. |

3-3 REAR PANEL

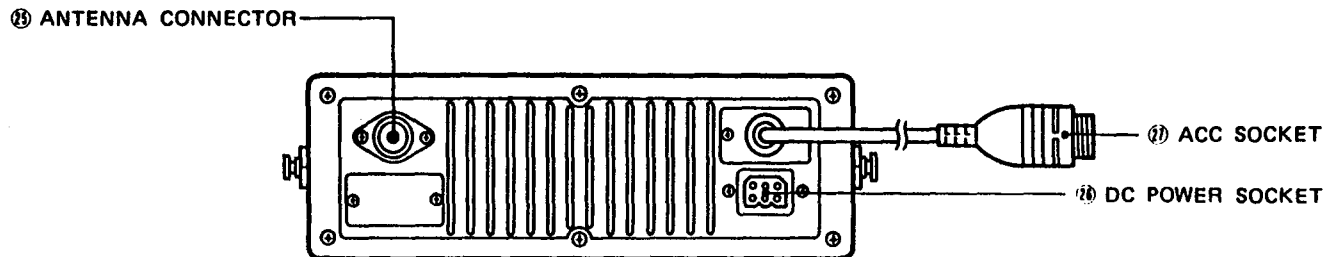

(25) ANTENNA CONNECTOR

Connect an antenna cable here. The connector should be matched with a PL-259 plug.

(26) DC POWER SOCKET

Connect the supplied DC power cable from this socket to an external 12V DC power source. Refer to SECTION 2 INSTALLATION for detailed information.


(27) ACC SOCKET

This socket provides signals for the hailer or the intercom functions. Refer to SECTION 2 INSTALLATION for connection information.



4-1 RECEIVING


(1) Turn ON the POWER



1) Push the [POWER] SWITCH ON.

- The number "16" and "USA" appear on the CHANNEL DISPLAY.


(2) Adjust the [VOLUME] CONTROL



1) Rotate the [SQUELCH] CONTROL completely counterclockwise.

2) Rotate the [VOLUME] CONTROL clockwise for a suitable noise level from the speaker.



(3) Adjust the [SQUELCH] CONTROL



1) Rotate the [SQUELCH] CONTROL clockwise until the channel noise just disappears. This is the threshold point where signals can be received.

- The transceiver remains silent after this adjustment until a signal is received which opens the receiver's squelch circuit.


**(4) Select the channel system
(International/U.S.A.)**



- 1) The transceiver is presently in the U.S.A. mode and will tune any of these channels.
- 2) If an International channel is required, push the [FUNCTION] SWITCH, and then push the [USA] SWITCH. The International mode is now selected and "USA" disappears from the CHANNEL DISPLAY.



- 3) To return to the U.S.A. mode, push the [FUNCTION] SWITCH, and then the [USA] SWITCH.

(5) Select channel



- 1) Push the [DIAL] SWITCH.
- 2) Rotate the CHANNEL SELECTOR to choose the required operating channel. The selected channel number appears on the CHANNEL DISPLAY, and the transceiver is now receiving the indicated channel.



(6) Weather mode

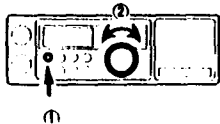



- 1) Push the [WX] SWITCH. The letters "WX" appear on the CHANNEL DISPLAY indicating the transceiver is in the weather mode.
- 2) Rotate the CHANNEL SELECTOR to choose the desired weather channel (1 ~ 10).
- 3) The transceiver only operates in the receive mode when the weather channels are selected. If the PTT SWITCH on the microphone is pushed, the audio signal disappears and no signal is transmitted.

4 - 2 TRANSMITTING



(1) Select output power



(2) Select the operating channel.

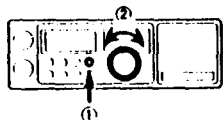

(3) Move to a call channel

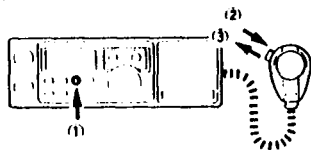

The following transmitting procedures should be started after finishing the steps described above in SECTION 4 - 1 RECEIVING.

1) The IC-M100 automatically resets to the HIGH (25W) power position when the transceiver is turned ON.

2) Push the [HI/LO] SWITCH to select the LOW (1W) power position.

• "LOW" appears on the CHANNEL DISPLAY.

3) Push the [HI/LO] SWITCH again to change back to the HIGH (25W) power position. There is no "HIGH" power indicator.

1) Push the [DIAL] SWITCH.

2) Rotate the CHANNEL SELECTOR to choose a channel suitable for the type of communication intended.


3) Listen carefully to be sure the channel is clear.

1) Push the [CH 16] SWITCH, and wait until the channel is clear.

2) Push the PTT SWITCH on the microphone and call the party you are trying to contact. Speak into the microphone using your normal voice level.

3) After contact, release the PTT SWITCH to return to receiving.


(4) Move to an operating channel

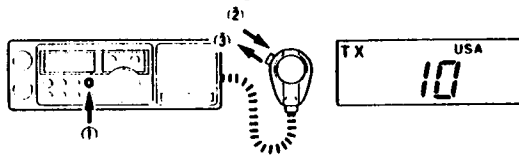

1) After establishing contact with the desired party, push the [DIAL] SWITCH to move to the channel previously selected in STEP (2).

2) Resume your conversation.


3) When your conversation is completely finished, return the microphone to the mic hanger, and the transceiver automatically changes to channel 16.

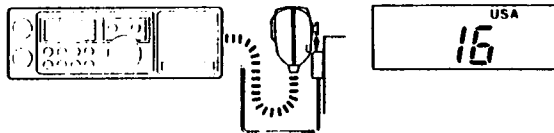

SECTION 5 - FUNCTIONS OPERATION

5 - 1 MEMORY CHANNEL OPERATION

(1) Using the memory channels.

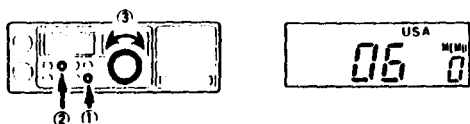


1) Push the [FUNCTION] SWITCH, and then push the [MR] SWITCH.

2) Rotate the CHANNEL SELECTOR to choose a memory channel (0 ~ 15). Memory channels which have not been programmed cannot be selected. Refer to (2) below, Programming the memory channels.


3) The channel number and the memory number selected appear on the CHANNEL DISPLAY.

(2) Programming the memory channels

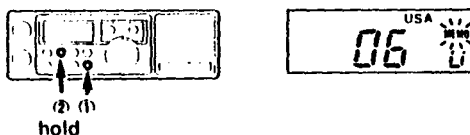


1) Push the [FUNCTION] SWITCH, and then push and hold the [MR] SWITCH for approximately 2 seconds until the word "MEMO" on the CHANNEL DISPLAY begins to blink.

2) Rotate the CHANNEL SELECTOR to choose a memory channel. Push the [FUNCTION] SWITCH.

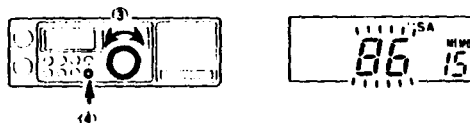

3) Rotate the CHANNEL SELECTOR to choose a required channel. Push the [FUNCTION] SWITCH.

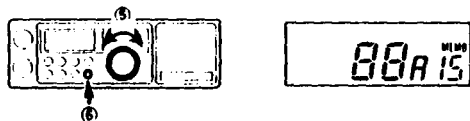


5-2 SCANNING OPERATION


- (1) Channel scan
- Memory scan
- Weather scan




DIAL SCAN



MEMORY SCAN




WEATHER SCAN



(2) (3)



(4) (5) Start again



Push any of these switches to stop the scan

The following procedure explains how to automatically scan all marine channels, a memory channel or a weather channel.

- 1) Push the following switches as required for the correct mode.

Channel scan : [DIAL] SWITCH
 Memory scan : ①[FUNCTION] ② [MR] SWITCHES
 Weather scan : [WX] SWITCH

- 2) Rotate the [SQUELCH] CONTROL clockwise until the noise is quieted.

- 3) Push the [FUNCTION] SWITCH, and then push the [SCAN] SWITCH.

- "SCAN" appears and blinks on the CHANNEL DISPLAY.

- 4) On reaching the highest channel, the scan continues from the lowest channel up wards in a continuous loop. Each time the transceiver reaches a channel with a signal, the scan stops as long as the signal is present. When the channel is clear, the scan resumes moving upwards.


- 5) When a signal is received and the scan stops, push the [FUNCTION] SWITCH and then push the [SCAN] SWITCH to start the scan again.

- 6) Push any one of the [DIAL], [WX], [CH 16] or [FUNCTION] SWITCHES to stop the scan function.

(2) Lockout scan

In the all channel scan mode the transceiver automatically stops at specific channels. Lockout scan, however, allows you to skip unnecessary channels, customizing the transceiver to fit your exact programming requirements.

(a) Locking out a channel

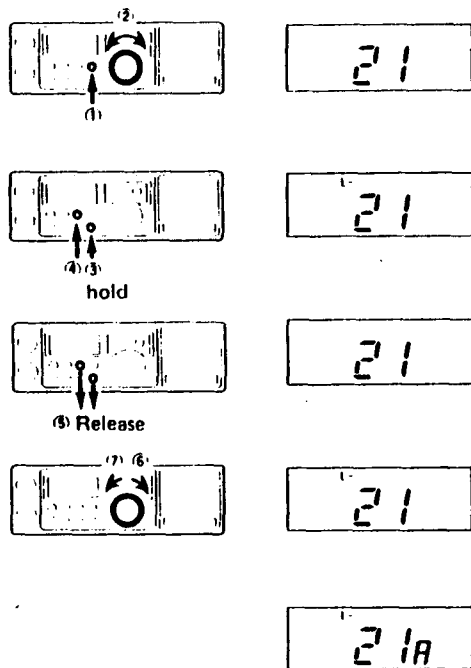

1) Push the [DIAL] SWITCH.

2) Rotate the CHANNEL SELECTOR to choose the channel to be locked out.

3) Push and hold the [FUNCTION] SWITCH, and then push the [L-SCAN] SWITCH.

• "L-" appears on the CHANNEL DISPLAY.


4) Release the [FUNCTION] SWITCH. The "L-" symbol disappears and the channel is now locked out.

5) Turn the CHANNEL SELECTOR to select an adjacent channel and then shift back to the original channel.

• "L-" appears again on the CHANNEL DISPLAY.

NOTE: Locking out an International channel simultaneously locks out the U.S.A. channel with the same number and vice versa. For example, locking out channel 21 also locks out channel 21A.

(b) Activate Lockout scan



1) Rotate the [SQUELCH] CONTROL clockwise until the noise from the speaker just disappears.

2) Push the [FUNCTION] SWITCH, and then push the [L-SCAN] SWITCH. "L-SCAN" appears and "SCAN" begins to blink on the CHANNEL DISPLAY.


3) The scan moves upwards, skipping the locked-out channels.

4) When a signal is received and the scan stops, push the [FUNCTION] SWITCH and then push the [L-SCAN] SWITCH to start Lockout scan again.

5) Push any one of the [DIAL], [WX], [CH 16] or [FUNCTION] SWITCHES to stop Lockout scan.





(4) Start again



Push any of these switches to stop the scan.

(c) Cancelling a lockout channel



1) Push the [DIAL] SWITCH.


2) Rotate the CHANNEL SELECTOR to choose a channel you no longer wish locked out.

3) Push and hold the [FUNCTION] SWITCH, and then push the [L-SCAN] SWITCH. The "L-" symbol appears.

4) Release the [FUNCTION] SWITCH. The "L-" symbol disappears.




(3) hold



(4) Release

5-3 DUAL WATCH OPERATION

This function allows a check of channel 16 while listening on another channel. When a signal appears on channel 16, the transceiver automatically switches to channel 16 until this signal has cleared, then the transceiver returns to the original channel.

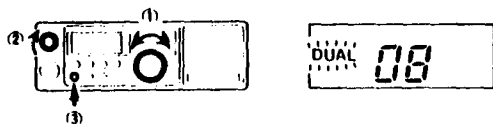

1) Choose the desired operating channel.

2) Rotate the [SQUELCH] CONTROL clockwise until the noise just disappears.

- Perform this setting when there is no signal present on the channel.

3) Push the [DUAL] SWITCH.


- "DUAL" appears on the CHANNEL DISPLAY, and begins to blink.

4) The transceiver now alternates between the channel selected in step 1) and channel 16.

5) When a signal appears on either channel, that channel is monitored.

- If a signal appears on both channels simultaneously, then channel 16 has priority.


- The transceiver remains locked on channel 16 until it is clear, and then switches to monitor the other signal.

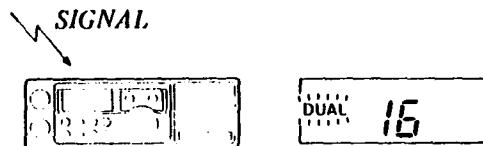

5-4 DISPLAY LIGHT AND LIGHT DIMMER

The IC-M100 has an illuminated CHANNEL and FUNCTION DISPLAY for easy reading in dim or no light situations. The light may be turned ON and OFF, also the intensity may be varied to suit the ambient light conditions.


(1) Light ON and OFF



- 1) Push the [FUNCTION] SWITCH, and then push the [DIM] SWITCH to turn the light ON and OFF.


- 2) Repeat step 1) to change the condition of the light.

(2) Light intensity

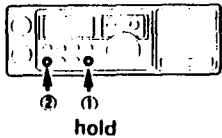

- 1) Push and hold the [FUNCTION] SWITCH, and then push the [DIM] SWITCH.

- 2) Continue holding the [FUNCTION] SWITCH IN while rotating the CHANNEL SELECTOR to vary the light intensity.

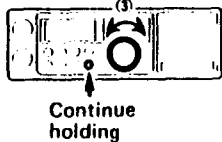


- 3) The IC-M100 has 4 different levels of light intensity. Rotate the CHANNEL SELECTOR CCW for darker intensity and CW for brighter intensity.

- 4) Release the [FUNCTION] SWITCH.

5-5 HAILER AND INTERCOM OPERATIONS

(1) Hailer operation

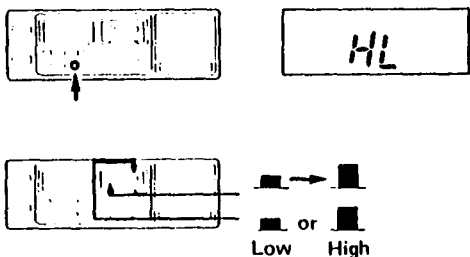

The IC-M100 provides a hailer mode as an audio amplifier function for a Public Address system and has an interphone function for communicating between the deck and cabin. Both functions can be used at the same time. Refer to SECTION 2 - 1 for connecting instructions.

The hailer function allows that you voice to be amplified through an external loudspeaker while you speak into the IC-M100 microphone.

1) Connect a 4 ~ 8Ω (more than 5W) speaker to the ACC SOCKET. Refer to SECTION 2 - 1 for connecting instructions.

2) Turn power ON.

3) Push the [HL] HAILER MODE SWITCH to change to the hailer mode.

- "HL" appears on the CHANNEL DISPLAY.

4) Select the hailer function by using the [HAILER/INCOM] SWITCH.


- HAILER FUNCTION SWITCH: Out position

5) Select the audio volume level by using the [HIGH/LOW] SWITCH.

- HAILER OUTPUT POWER SELECTOR SWITCH


Out position : High output power

In position : Low output power

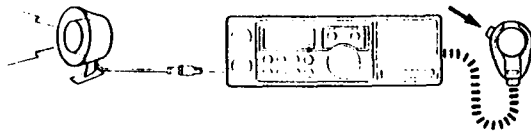

6) Push the PTT SWITCH on the microphone and speak into the microphone.

- The hailer speaker emits the audio.



7) Push any of the switches or rotate the CHANNEL SELECTOR to return to normal operations.

(2) Intercom operation

The intercom function allows you to receive an answer from the deck to your hailer message via the IC-M100 internal speaker.

1) Connect a 4 ~ 8Ω (more than 5W) speaker and switch to the ACC SOCKET. Refer to SECTION 2 - 1 for connecting instructions.


2) Turn power ON.

3) Push the [HL] HAILER MODE SWITCH to change to the hailer mode.

- "HL" appears on the CHANNEL DISPLAY.

4) Select the intercom function by pressing the [HAILER/ INCOM] SWITCH IN.

- INTERCOM FUNCTION SWITCH: In position






5) Select the audio volume level by using the [HIGH/LOW] SWITCH.

• HAILER OUTPUT POWER SELECTOR SWITCH


Out position : High output power

In position : Low output power

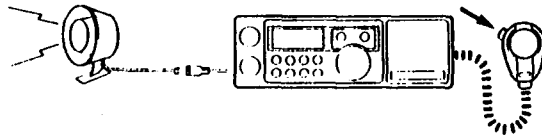

6) Push the PTT SWITCH on the microphone and speak into the microphone.

• The intercom speaker emits the audio.

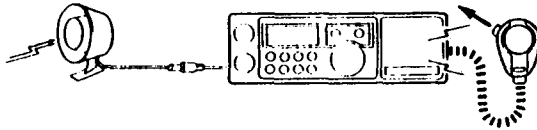

7) Release the PTT SWITCH to hear an answer from the deck.



8) Push any of the switches or rotate the CHANNEL SELECTOR to return to normal operations.

(3) Controlling the intercom from the deck side

The intercom function can also be controlled on the deck.

1) To call the cabin, close the CALL 1 SWITCH and speak into the intercom speaker. Refer to SECTION 2 - 1 for connection information for the CALL 1 SWITCH.

2) Release the switch to return the IC-M100 to cabine control of the intercom function.

SECTION 6 OPERATING RULES AND GUIDELINES

PREVENT INTERFERENCE

Before transmitting, monitor the channel you wish to use to avoid interrupting transmissions in progress.

CALL PROCEDURES

Calls must be properly identified and time limits must be respected.

- 1) Give your call sign each time you call another vessel or a coast station. If you have no call sign, identify the station by giving the vessel name and the name of the licensee.
- 2) Give your call sign at the end of each transmission of more than 3 minutes duration.
- 3) You must break and give your call sign at least once every fifteen minutes during long ship-to-shore calls.
- 4) Keep your unanswered calls short (less than thirty seconds) and do not repeat a call for two minutes.
- 5) Unnecessary transmissions are not allowed.

PRIORITIES

- 1) Read all the rules and regulations pertaining to priorities and keep an up-to-date copy handy. Safety and Distress messages take priority over all others.
- 2) You must monitor and be able to transmit on Channel 16.
- 3) False or fraudulent distress signals are prohibited and punishable by law.

PRIVACY

- 1) Information overheard but not intended for you cannot lawfully be used in any way.
- 2) Indecent or profane language is prohibited.

LOGS

Use of this equipment requires entry of the watch period of Channel 16 by the operator with vessel name, call sign and operator signature. All distress, emergency and safety messages must be recorded in complete detail. Log date activity is usually recorded in 24 hour time. Universal Time (formerly GMT) is frequently used.

Adjustments, repairs, channel frequency changes and authorized modifications affecting electrical operation of the equipment must be kept in the maintenance log and entries signed by the authorized licensed technician performing or supervising the work. A sample Maintenance log is included in the back of this manual.

RADIO LICENSES

1) Ship Station License

When your craft is equipped with a VHF/FM transceiver such as the IC-M100 you must possess a current radio station license before using the equipment. It is unlawful to operate a Ship Station which is not licensed.

Inquire through your dealer or the appropriate government agency for a Ship Radiotelephone License application. Your government issued license states the call sign which is your craft's identification for radio purposes.

2) Operator's License

A Restricted Radiotelephone Operator Permit is the license most often held by small vessel radio operators when a radio is not required for safety purposes. You can usually obtain this permit by mail without examination. Again, contact your marine dealer or appropriate government agency for information or applications.

The Restricted Radiotelephone Operator Permit must be posted or be kept with the operator. Only a licensed radio operator may operate a transceiver. However, non-licensed individuals may talk over a transceiver if a licensed operator starts, supervises, and ends the call, and makes the necessary log entries. A current copy of the applicable government rules and regulations is usually required to be kept.

DEAD SPOTS

Topography may prevent receiving and transmitting from some locations. Move to another location if you find a "dead spot".

ROUTINE MAINTENANCE

Your IC-M100 is designed to perform well for many years if cared for in a proper manner. Each year you should have the following checked by a licensed technician.

1. Check the antenna system.
2. Check the transmitter frequency, deviation, and power output.

SECTION 7 MARINE VHF TRANSCEIVER CHANNEL CHART

Channel No.	Frequency (MHz)		Transmitter output power
	Transmitter	Receiver	
01	156.050	160.650	25W & 1W
01A	156.050	156.050	25W & 1W
02	156.100	160.700	25W & 1W
02A	156.100	156.100	25W & 1W
03	156.150	160.750	25W & 1W
03A	156.150	156.150	25W & 1W
04	156.200	160.800	25W & 1W
04A	156.200	156.200	25W & 1W
05	156.250	160.850	25W & 1W
05A	156.250	156.250	25W & 1W
06	156.300	156.300	25W & 1W
07	156.350	160.950	25W & 1W
07A	156.350	156.350	25W & 1W
08	156.400	156.400	25W & 1W
09	156.450	156.450	25W & 1W
10	156.500	156.500	25W & 1W
11	156.550	156.550	25W & 1W
12	156.600	156.600	25W & 1W
13	156.650	156.650	25W & 1W
14	156.700	156.700	25W & 1W
15	156.750	156.750	1W only
16	156.800	156.800	25W & 1W
17	156.850	156.850	1W only
18	156.900	161.500	25W & 1W
18A	156.900	156.900	25W & 1W

Channel No.	Frequency (MHz)		Transmitter output power
	Transmitter	Receiver	
19	156.950	161.550	25W & 1W
19A	156.950	156.950	25W & 1W
20	157.000	161.600	25W & 1W
20A	157.000	157.000	25W & 1W
21	157.050	161.650	25W & 1W
21A	157.050	157.050	25W & 1W
22	157.100	161.700	25W & 1W
22A	157.100	157.100	25W & 1W
23	157.150	161.750	25W & 1W
23A	157.150	157.150	25W & 1W
24	157.200	161.800	25W & 1W
25	157.250	161.850	25W & 1W
26	157.300	161.900	25W & 1W
27	157.350	161.950	25W & 1W
28	157.400	162.000	25W & 1W
60	156.025	160.625	25W & 1W
60A	156.025	156.025	25W & 1W
61	156.075	160.675	25W & 1W
61A	156.075	156.075	25W & 1W
62	156.125	160.725	25W & 1W
62A	156.125	156.125	25W & 1W
63	156.175	160.775	25W & 1W
63A	156.175	156.125	25W & 1W
64	156.225	160.825	25W & 1W
64A	156.225	156.225	25W & 1W

Channel No.	Frequency (MHz)		Transmitter output power
	Transmitter	Receiver	
65	156.275	160.875	25W & 1W
65A	156.275	156.275	25W & 1W
66	156.325	160.925	25W & 1W
66A	156.325	156.325	25W & 1W
67	156.375	156.375	25W & 1W
68	156.425	156.425	25W & 1W
69	156.475	156.475	25W & 1W
70	156.525	156.525	25W & 1W
71	156.575	156.575	25W & 1W
72	156.625	156.625	25W & 1W
73	156.675	156.675	25W & 1W
74	156.725	156.725	25W & 1W
75	Guard
76	Guard
77	156.875	156.875	25W & 1W
78	156.925	161.525	25W & 1W
78A	156.925	156.925	25W & 1W
79	156.975	161.575	25W & 1W
79A	156.975	156.975	25W & 1W
80	157.025	161.625	25W & 1W
80A	157.025	157.025	25W & 1W
81	157.075	161.675	25W & 1W
81A	157.075	157.075	25W & 1W
82	157.125	161.725	25W & 1W

Channel No.	Frequency (MHz)		Transmitter output power
	Transmitter	Receiver	
82A	157.125	157.125	25W & 1W
83	157.175	161.775	25W & 1W
83A	157.175	157.175	25W & 1W
84	157.225	161.825	25W & 1W
84A	157.225	157.225	25W & 1W
85	157.275	161.875	25W & 1W
85A	157.275	157.275	25W & 1W
86	157.325	161.925	25W & 1W
86A	157.325	152.325	25W & 1W
87	157.375	161.975	25W & 1W
87A	157.375	157.375	25W & 1W
88	157.425	162.025	25W & 1W
88A	157.425	157.425	25W & 1W
WX1	162.550	RX. only
WX2	162.400	RX. only
WX3	161.650	RX. only
WX4	162.475	RX. only
WX5	162.425	RX. only
WX6	162.500	RX. only
WX7	162.525	RX. only
WX8	162.450	RX. only
WX9	161.775	RX. only
WX0	163.275	RX. only



TRANSMITTER LOG

RADIO SET SER. NO:	Date	Date	Date	Date	Date	Date	Date
Transmitter RF Power Output							
Transmitter Deviation							
Transmitter Frequency CH16							
Transmitter Frequency CH 6							
TECHNICIAN SIGNATURE, ADDRESS, FCC LICENSE NO., EXPIRATION DATE							

SECTION 5 - TROUBLESHOOTING

Problem	Possible Cause	Solution
1. Power does not come ON when the [POWER] SWITCH is pushed.	<ul style="list-style-type: none"> • Power cable is improperly connected. • Power cable is connected with the polarity reversed. • Blown fuse. 	<ul style="list-style-type: none"> • Carefully reconnected the power cable. • Disconnect the power cable, replace the blown fuses on the DC power cable, then reconnect the power cable observing proper polarity. • Check for the cause, then replace fuses on the DC power cable or on the rear panel.
2. Low level or no sound comes from the speaker.	<ul style="list-style-type: none"> • [VOLUME] CONTROL is completely counterclockwise. • The [SQUELCH] CONTROL is completely counterclockwise. 	<ul style="list-style-type: none"> • Turn the [VOLUME] CONTROL to a suitable level. • See SECTION 5 - 1 RECEIVING for proper Squelch operation.
3. Sensitivity is low and only strong signals are audible.	<ul style="list-style-type: none"> • Antenna feed line is cut or shorted, or a corroded or defective connector is installed. 	<ul style="list-style-type: none"> • Check the feedline and connector, and correct any improper condition.
4. Either the voice is not heard or the "TX" is not displayed when transmitting.	<ul style="list-style-type: none"> • Mic cable is cut. 	<ul style="list-style-type: none"> • Inspect the mic cable for possible breaks or tears, and correct any improper condition.
5. CHANNEL DISPLAY indicates erroneous information.	<ul style="list-style-type: none"> • Internal microprocessor may be malfunctioning. 	<ul style="list-style-type: none"> • Push and hold the [RESET] SWITCH then, push the [SQUELCH] SWITCH. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>CAUTION: After resetting the CPU, all information you have programmed into the memory channels will be cleared. Memory channels must be reprogrammed.</p> </div>

SECTION 10 SPECIFICATIONS

GENERAL

Dimensions : 228mm(W) x 78mm(H) x 208mm(D)
 Weight : 2.1kg
 Number of channels : All U.S.A. and International channels
 16 Memory channels
 10 Weather channels
 Frequency stability : 0.0005%
 Temperature range : -20°C ~ +60°C
 Channel spacing : 25kHz
 Power supply requirement : 13.8V DC
 Antenna impedance : 50Ω
 Type of emission : 16K0G3E

RECEIVER

Frequency range : 156 ~ 163MHz
 Sensitivity : Less than 0.3μV for 12dB SINAD
 Threshold squelch sensitivity : 0.3μV
 Tight squelch sensitivity : 1μV
 Intermediate frequencies : 1st IF : 21.4MHz
 2nd IF : 455kHz
 Audio output : More than 5W at 10% distortion
 Current drain : Audio max. : 0.8A
 Standby : 0.2A

TRANSMITTER

Frequency range : 156 ~ 157.5MHz
 Maximum deviation : ±5kHz (16K0G3E)
 RF Output power : HIGH : 25W
 LOW : 1W
 Spurious emission : 70dB below carrier
 Harmonic emission : 70dB below carrier
 Microphone : 600Ω microphone
 Current drain : High power : 6.3A
 Low power : 1.7A

SECTION 11 EMERGENCIES

EMERGENCIES

If your vessel requires assistance, attract the attention of other vessels and the Coast Guard by sending a distress message on Channel 16.

Procedures for sending a distress signal:

1. MAYDAY, MAYDAY, MAYDAY (repeat three times)
2. THIS IS (name of the vessel)
3. LOCATED AT (gives position)
4. Give the reason for the distress call.
5. Explain what assistance you need.
6. Give additional information to help those come to your assistance, (vessel length, color, type, etc.)
7. Use Channel 16 only to make initial contact.
8. After making initial contact agree on an alternate frequency, such as Channel 22A or Channel 6 and clear Channel 16 for other traffic.